

INSTRUCTION MANUAL

ST-AS

SMART TWEEZERS



P/N X-DOC164
May-16-05
Rev. A

10 Enterprise Drive
Carbondale, PA 18407, USA
Tel: (570) 842-2812 Fax: (570) 842-4290
E-mail: bokar@bomir.com



www.bokar.com www-smt-tool.com
www.xkar.com www.intelligenttweezers.com

ST-AS SMART TWEEZERS

TABLE OF CONTENTS

	PAGE
I. NOTICE	3
II. SAFETY INFORMATION	3
Warnings	3
Cautions	3
III. OVERVIEW	3
IV. QUICK REFERENCE	4
Display Area	4
Primary Display	4
Secondary Display	4
Bar Graph	4
The Jog Dial Button	4
Reset Button	4
Slide Switch	5
V. USING SMART TWEEZERS	5
Turning Smart Tweezers ON	5
Automatic Power Off	5
Battery	5
Low Battery Indication	5
VI. MENU STRUCTURE	6
Changing from the Default Setting	6
Returning to Factory Defaults	8
Saving Setup Options	8
VII. MEASUREMENTS	8
VIII. MAINTENANCE	10
General Maintenance	10
Replacing the Batteries	10
IX. TROUBLESHOOTING	10
X. TECHNICAL SPECIFICATION	10
Basic Specifications	11
Detailed Accuracy Specifications	12
Feature Summary	12

I. NOTICE

The contents of this document is believed to be accurate, but is not guaranteed by Bokar International. The information contained within may be changed at any time and Bokar International and its distributors do not assume any responsibility for omissions or errors in this document.

II. SAFETY INFORMATION

Warnings

Inspect the Smart Tweezers case before using. Look for cracks and any damage. Do not use the device if it appears to be damaged.

Do not use the device if it operates abnormally.

Do not attempt to measure any components in-circuit when your circuit is under the power.

Cautions

To avoid possible damage to Smart Tweezers or to the equipment under test, follow these guidelines:

Disconnect circuit power and discharge all high-voltage capacitors before testing resistance, inductance, or capacitance.

Do not measure voltages more than 800 mV when in automatic mode.

Use proper terminals and functions for your measurements.

Use the correct batteries to power Smart Tweezers.

III. OVERVIEW

Smart Tweezers is an R-L-C meter in a set of tweezers. Smart Tweezers is designed for production line component evaluation, on board impedance testing, and SMD components sorting. With automatic recognition of measurement mode (R, L and C) Smart Tweezers is ideal for identifying surface mounted devices.

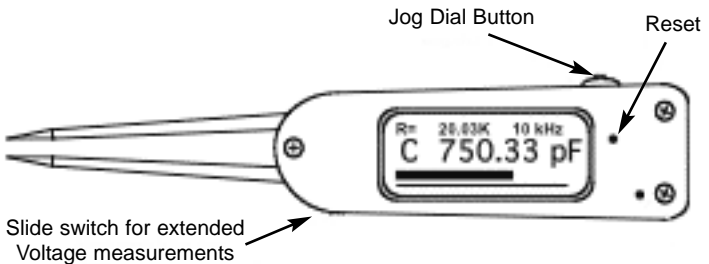


Figure 1.

Smart Tweezers has a unique mechanical and electronic design that incorporates a built-in direct precision SMD probe designed for component evaluation on the production line, PCB debugging, component impedance testing and sorting SMD components. The integrated SMD probe and graphic display, combined with automatic recognition of measurement modes (R, C, and L) and the range of measurement, allows the operator focus on the component under test. As a result testing, sorting and evaluation of components becomes more efficient and cost effective.

IV. QUICK REFERENCE

Display AreaSmart Tweezers has two display modes, Primary and Secondary.

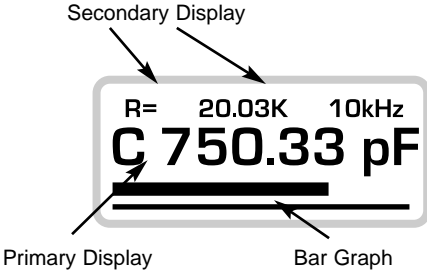


Figure 2.

Primary Display

The Primary Display is located in the middle of the display and is the larger of the two displays available. It shows the present reading. For most functions the primary display shows 5 digits.

If OUT OF RANGE is displayed an overload condition is present.

Secondary Display

The Secondary Display is located at the top of the display and is the smaller of the two displays. It shows the present reading of additional parameters, or measurement conditions when the primary display shows some other feature (e.g. L, C).

When multiple features are present, secondary display shows one of the values. For example, ESR value can appear in the secondary display while capacitor value appears in the primary display.

Bar Graph

The bar graph provides an analog indication of the measured input and is located at the bottom of the display.

 


Figure 3.

The Jog Dial Button

The Jog Dial button (Figure. 3) is used to choose the selected function or to change a setting. To change the menu displayed press and move the button left or right. To select or execute a function press the button down.

Reset Button

The reset button resets the unit. This may need to be pressed after changing the batteries.

Slide Switch

The slide switch can optionally be used to measure DC voltage up to 8V by enabling a 1/10 voltage divider. **Important:** The slide switch should be turned off once the voltage measurement is completed. If it is not turned off incorrect results in automatic mode may occur. The slide switch is not an automatic control option.

V. USING SMART TWEEZERS

Turning Smart Tweezers ON

To turn the Smart Tweezers ON, press the jog dial button to any position. The sign in the low left corner of the display indicates that device is ON and ready to perform measurements. A, R, L or C indicate auto, resistance, inductance and capacitance respectively.



Figure 4.

Automatic Power Off

The unit will automatically power off, the display goes blank and the device goes into a "sleep" mode if no component has been touched or button pressed for approximately 30 seconds. You can set power off interval by change TIMEOUT setting in DISPLAY menu.

Pressing the Jog Dial button turns Smart Tweezers back on and the device then returns to the display for the previously selected function.

Automatic power off does not occur when the device is in VOLTAGE, TRACE or MENU mode.

Battery

Smart Tweezers uses three 1.5V alkaline or air zinc "button" type batteries, size 11.2 x 5.6mm (Type 357A or LR44). Low Battery Indication The Low Battery message and battery icon in the display is the notification that the batteries are low and should be replaced (Fig. 5). The warning appears when the batteries are about 90% depleted. The unit is still operational for a short time, however the batteries should be replaced as soon as possible.

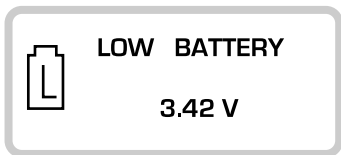


Figure 5.

VI. MENU STRUCTURE

From the main menu it is possible to set the Smart Tweezers back to their default setting (AUTOSET) or go to SYSTEM or MEASURE menus (Fig. 6).

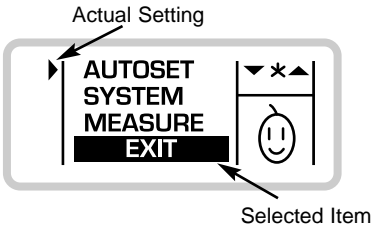


Figure 6.

Changing from the Default Setting

The user can change the default operating configuration of Smart Tweezers by changing the options. All setup options affect general operations and are active in all functions.

Smart Tweezers factory setting

Frequency:	AUTO range Meter automatically selects frequency for the best accuracy.
Measurement:	AUTO range Meter automatically selects R, C or L measurement.
Period:	1s
Sound:	OFF
Display:	RIGHT
Timeout:	30 seconds

To enter SETUP mode turn on the device and go to MAIN menu. SYSTEM Setting Menu

Use SYSTEM menu to set up system parameters for all functions (Fig. 7).

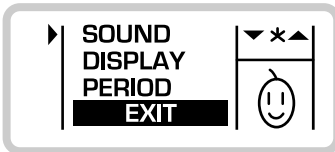


Figure 7.

SOUND Menu

Use the SOUND setting to turn the beeper ON or OFF as shown in Fig. 8.

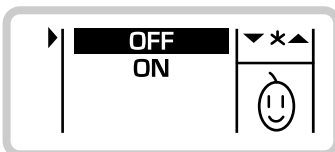


Figure 8.

DISPLAY orientation, contrast, timeout setting

Use the DISPLAY setting to change the display orientation, the contrast and the timeout as shown in Fig. 9.

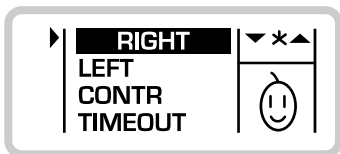
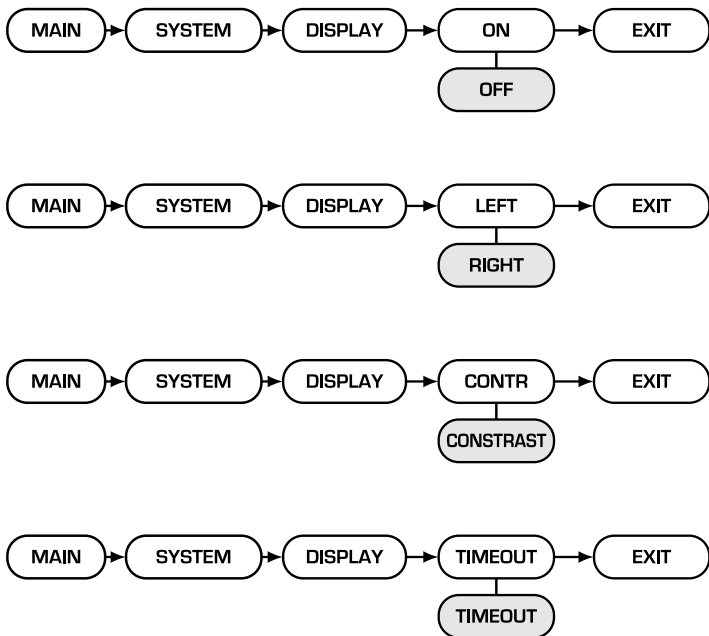


Figure 9.

Setting testing PERIOD

Use PERIOD to change the reading period setting as shown in Fig. 10.

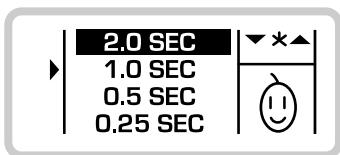
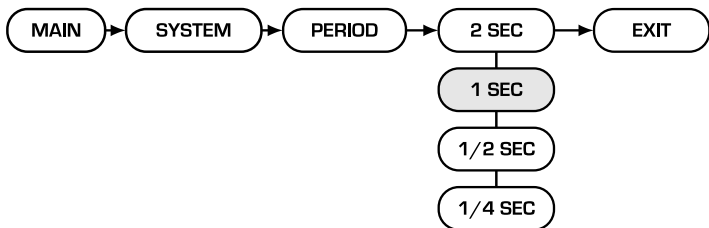


Figure 10.

Returning to Factory Defaults

Smart Tweezers comes with the setup options preset at the factory.

To return to these settings:

1. Go to the MAIN menu.
2. Set AUTOSSET.
3. Set EXIT and all factory settings are restored.

Saving Setup Options

Choose EXIT to save the last option from the current menu. This option is marked by the arrow symbol. Choose EXIT to exit from the main menu.

VII. MEASUREMENTS

The default setting is to perform fully automatic auto range measurement for resistance, inductance and capacitance.

Most measurement functions also have a manual mode, which can be selected by using the jog dial button. Use the manual setting when you need to measure a specific parameter or need better accuracy.

MEASUREMENT setting menu

To measure specific components or to change measurement parameters, use Measure menu as shown in (Fig. 11).

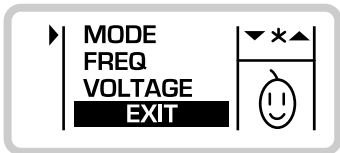


Figure 11.

Measuring Resistance, Inductance or Capacitance

For automatic measurement use AUTO setting (default). To measure only one parameter - resistance, inductance or capacitance set Smart Tweezers as shown in Fig. 12.


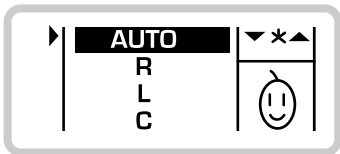


Figure 12.

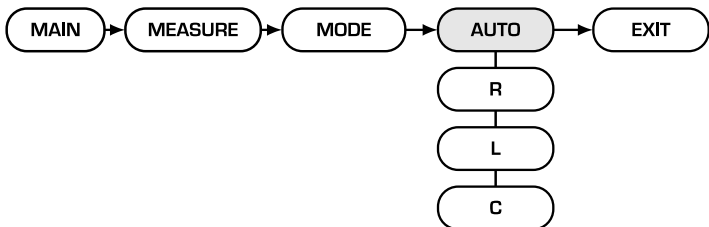

Note: When measuring small resistance, capacitance or inductance, make sure that terminals are clean.

For automatic measurement use AUTO setting (default). Use fixed test frequency for specific measurements, such as very small or very large capacitance (less than 50pf or more than 100uF) or inductance.


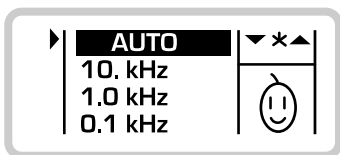


Figure 13.

To fix test frequency set Smart Tweezers as shown in Fig. 13.

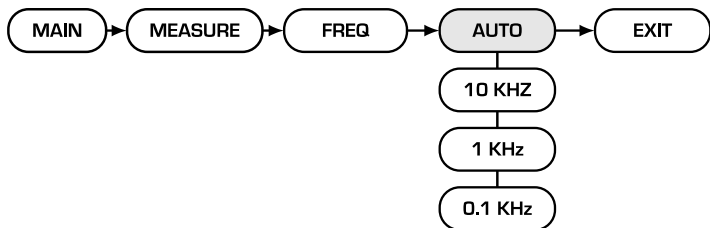

Measuring Voltage

Use AUTO mode (default) to measure DC Voltage from 100uV to 800mV (up to 8V with slide switch manual setting). To measure voltages configure Smart Tweezers as shown in Fig. 14.


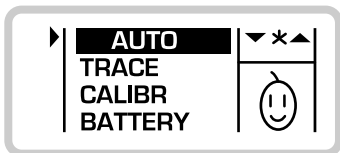


Figure 14.

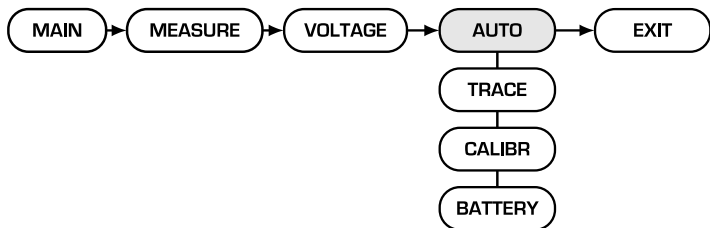

Use AUTO mode (default) to measure DC Voltage from 100uV to 800mV.



Figure 15.

Use TRACE mode if you want to see the oscilloscope like picture of Voltage as shown in (Fig. 16).

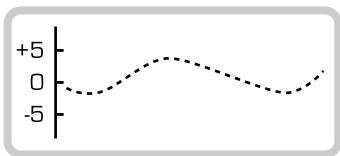


Figure 16.

To change speed turn jog dial button LEFT or RIGHT. To EXIT press the job dial button.

Adjusting Voltage Offset

To adjust voltage offset:

1. Connect the probes to each other and choose CALIBER mode.
2. Press EXIT to exit calibration mode.
3. Disconnect probes.

Use BATTERY mode to measure current battery voltage. Press the jog dial button to exit.

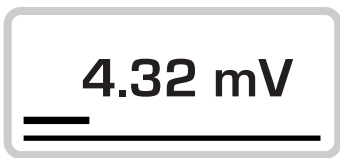


Figure 17.

IX. MAINTENANCE

General Maintenance

Dirt or moisture in the terminals can affect measurement accuracy. Clean the terminals regularly. Do not use abrasives or solvents. To clean the terminals:

1. Turn the device off.
2. Shake out any dirt that may be on the terminals.
3. Soak a new swab with alcohol. Work the swab around each terminal.

Replacing the Batteries

Replace the batteries with three alkaline or air-zinc batteries (LR44 or 375A type). To replace the batteries:

1. Remove three screws with screwdriver TORX # 5 and lift the cover.
2. Replace the batteries follow the "+" and "-" sign.
3. Secure the cover.
4. Reset the device.

IX. TROUBLESHOOTING

If there appears to be a malfunction during the operation of the device, the following steps should be performed in order to isolate the cause of the problem:

1. Check the battery.
2. Review the operating instructions for possible mistakes in operating procedure.

CAUTION: Except for replacing the battery, repair of the device should only be performed by an Authorized Service Center or by qualified device service personnel.

X. TECHNICAL SPECIFICATION

Physical Specifications

Operating Temperature:	0 °C to +55 °C
Storage Temperature:	40 °C to +60 °C
Relative Humidity:	0 % to 90 % (0 °C to 35 °C) 0 % to 70 % (35 °C to 55 °C)
Altitude Operating:	0-2000 meters
Storage:	10000 meters
Battery Type:	1.5V LR44 Alkaline or Air zinc
Battery Life:	80 Hours typical with alkaline, 240 hours with air zinc battery
Electromagnetic Compatibility (EMC):	Susceptibility and Emission: FCC 15 part B
Size:	14.0 x 2.5 x 3.0 cm (3.94 x 0.9 x 1.5 in)
Weight:	53 grams (0.11lb)
Warranty:	1 year

Basic Specifications

Measured Parameters:	C, L, R, ESR, Rs, Rp
Measuring Frequencies:	100Hz, 1 kHz, 10kHz
Measurement rate:	1 time per second, default
DC Voltage:	0 to 800 mV (Up to 8V with optional slide switch manual setting)
Resistance:	0 to 9M
Capacitance:	10 pF to 900 µF
Inductance:	1µH to 999mH

Detailed Accuracy Specifications

Accuracy is specified at 18°C to 28°C (64°F to 82°F), with relative humidity to 90%.

Resistance:

Range:	0.1Ohm - 5MOhm
Accuracy:	1% in range 0.1R - 5M
Test Frequency:	1 kHz

Capacitance:

Range:	10pF - 499μF
Accuracy:	5% in range 20pF - 1000μF
Resolution:	0.5pF in range 1pF- 100pF
Test Frequency:	1 kHz C > 1000pF 10 kHz C < 1000pF 100Hz C > 1μF

Inductance:

Range:	1μH-1H
Accuracy:	10% in range 1μH - 10μH 5% in range 10μH - 100μH 5% in range 100μH - 1H
Resolution:	0.5μH in range 1μH - 100μH
Test Frequency:	10 kHz L < 1μH 1 kHz L > 1μH 100Hz L > 1mH

Feature Summary

Graphics Displays. Analog Bar Graph. Fully automatic measurement of Inductance, Capacitance and Resistance. Auto range: Meter automatically selects best range. Trace Graph: Oscilloscope like display for voltage measurement.



BOKAR International
10 Enterprise Drive
Carbondale, PA 18407, USA

Tel: (570) 842-2812 Fax: (570) 842-4290

E-mail: bokar@bomir.com

www.bokar.com www.smt-tool.com www.intelligenttweezers.com

US Master Distributor: www.bomir.com